



INSTALLATION AND OPERATING MANUAL OF COOKERHOODS



Table of Contents

FALCO THE COMPANY.....	3
USING THIS MANUAL	3
WARNING AND SAFETY INSTRUCTIONS.....	3
CORRECT USE	4
CORRECT INSTALLATION	4
CLEANING AND CARE	5
INSTALLATION	5
TYPE OF EXTRACTION TO BE USED	5
PRE-INSTALLATION.....	6
MOUNTING THE EXTRACTOR.....	6
AIR VENTILATION SETTINGS.....	7
OPERATING INSTRUCTIONS	10
GENERAL MAINTENANCE.....	11
FILTER MAINTENANCE	12
REPLACING DOWNLIGHTS.....	12
PARTS AND SERVICE.....	12

FALCO THE COMPANY

Falco Domestic Appliances was founded in 1991 and is proud to be a trusted name in the South African appliance industry.

Our business has been built on providing higher spec products offered at reduced prices.

More importantly, is the service aspect of our business, we value every customer and will always strive to assist to the best of our ability.

We thank you for supporting our company by purchasing this product and we hope that it will give you many years of use.

USING THIS MANUAL

Before installing the appliance, we strongly recommend that you read through the entire manual which includes safety instructions, proper installation and use of its functions.

It is important that you retain these instructions, proof of purchase for future reference.

Due to ongoing product development Falco reserves the right to alter specifications and appearances without notice.

WARNING AND SAFETY INSTRUCTIONS

- Incorrect installation, maintenance and repairs could cause harm to the user. Please ensure repairs are carried out by an authorised Falco technician.
- A damaged appliance can be dangerous. Please check for any visible damage before installation and notify your retailer should there be any signs of damage.
- Before connecting the appliance to the electrical mains supply, ensure that the electrical data on the rating label matches that of the electricity supply. Consult your local electrician if in doubt.
- Do not use electrical extension cables or multi-sockets when connecting your appliance electrically as this could cause a fire hazard.
- Any tampering with electrical or mechanical components can cause injury and will also void the product's warranty.
- During installation and repair the appliance must be disconnected from the mains electricity supply.

CORRECT USE

- To avoid accidental fire do not flambé or grill over a naked flame. If the extractor is switched on it could draw flames into the filter. Fat deposits could then ignite and present a fire hazard.
- Excessive heat can damage the internal components of the extractor.
 - When using the extractor over a gas hob or cooker, select the correct sized pan suitable for the size of gas burner.
 - Regulate the size of the flame to ensure that it does not spread above the sides of the pan.
- When cooking ensure that the extractor is on to prevent the build-up of condensation which could cause corrosion.
- When cooking with oil and fat never leave the pan or pot unattended. Overheated oil and fat could ignite and create a fire hazard.
- Do not use the extractor without the correct grease filters installed to prevent oil build up on the internal motor and other components.

CORRECT INSTALLATION

- Never install this extractor above a solid fuel stove or braai.
- Insufficient distance between the hob/cooker and the extractor could result in damage to the extractor. The minimum distances given in the “installation” section of this manual must be adhered to.
- The maximum distance between the hob/cooker and the extractor as recommended in the “installation” section of this manual must be adhered to. If not a reduction in cooking vapour drawn into the extractor may be experienced.
- If installed to duct outside the correct flue pipe must be used.
- The appliance must not be connected to a chimney or flue that is used by a fireplace or other appliance.
- Should additional ducting be used for outside extraction, a reduction in motor suction power will be experienced. Remedies to overcome this drop in suction power may include an additional inline type of motor or an alternative smooth and rigid type of ducting pipe may be used to help the air flow along easier.

CLEANING AND CARE


- There is a risk of fire if the extractor is not cleaned on a regular basis. Please clean and remove flammable oil deposits.
- Do not use steam when cleaning as it can damage the electrical components.

INSTALLATION

TYPE OF EXTRACTION TO BE USED

Your extractor can be used in the following two ways:

Outside Extraction is when cooking vapours are drawn in by the extractor, passing through the grease filters, which are then filtered and ducted to the outside by means of a ducting pipe either through the wall or up through the ceiling.

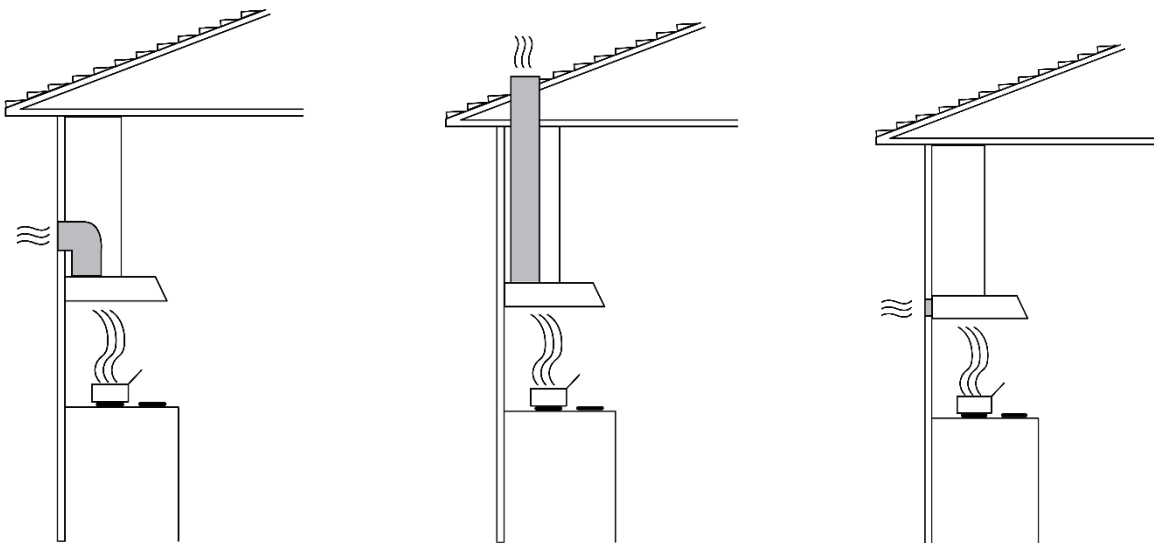

FAL-60-CHBL, FAL-60CHST,
FAL-90-CHBL, FAL-90-CHST

Recirculated Extraction is when the cooking vapours are drawn in by the extractor, passing through the grease filters and then secondary filters depending on your model:

- Cloth layer fitted directly behind the aluminium grease filters (AR-60-903BL, AR-60-903SS, AR-90-903BL, AR-90-903SS).
- Charcoal filter which fits below the motor of the cooker hood (FAL-60-MH10BLL, FAL-60-MH10STL, FAL-60-CHBL, FAL-60-CHST, FAL-90-MH10BLL, FAL-90-MH10STL, FAL-90-CHBL, FAL-90-CHST)

Once the air has passed through all the filters it recirculates back into the kitchen space via the outlet grilles on front of the extractor.


Please ensure that these grilles are not obstructed, even a partial obstruction will restrict the efficiency of the extractor.

PRE-INSTALLATION

Determine the extractor installation height above the hob/cooker.

If installed above an electric hob – a minimum distance of 650mm is required, but not exceeding 750mm.

If installed above a gas hob – a minimum distance of 750mm is required, but not exceeding.

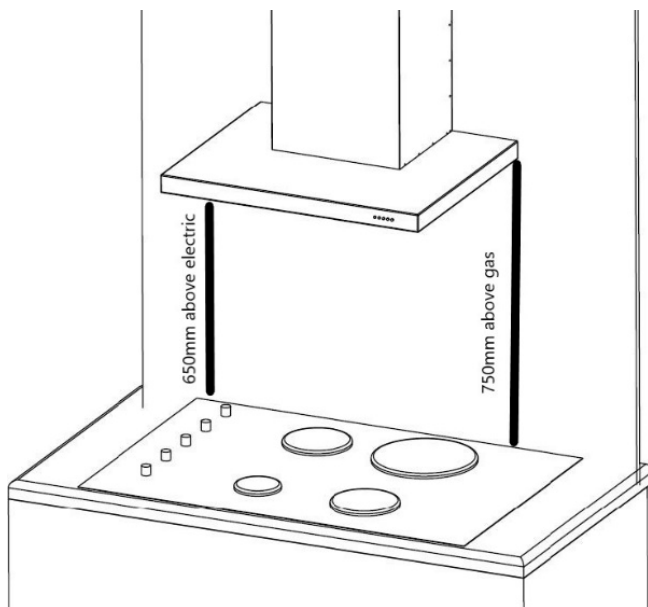

*Please note that if the distance exceeds 750mm less cooking vapour may be drawn in by the extractor for filtration.

MOUNTING THE EXTRACTOR


In most instances this type of extractor will be fitted below a cupboard.

1. Remove the grease filters from the extractor and hold it in place beneath the cupboard, once a suitable position for the extractor has been determined, mark with a pencil

where the holes will be drilled into the wall. Drill 2 x 8mm holes (or suitable size) into the wall.

Mount the extractor and fix into place by tightening the screws.

Please note that additional holes are provided on top of the unit to fix to the cupboard.

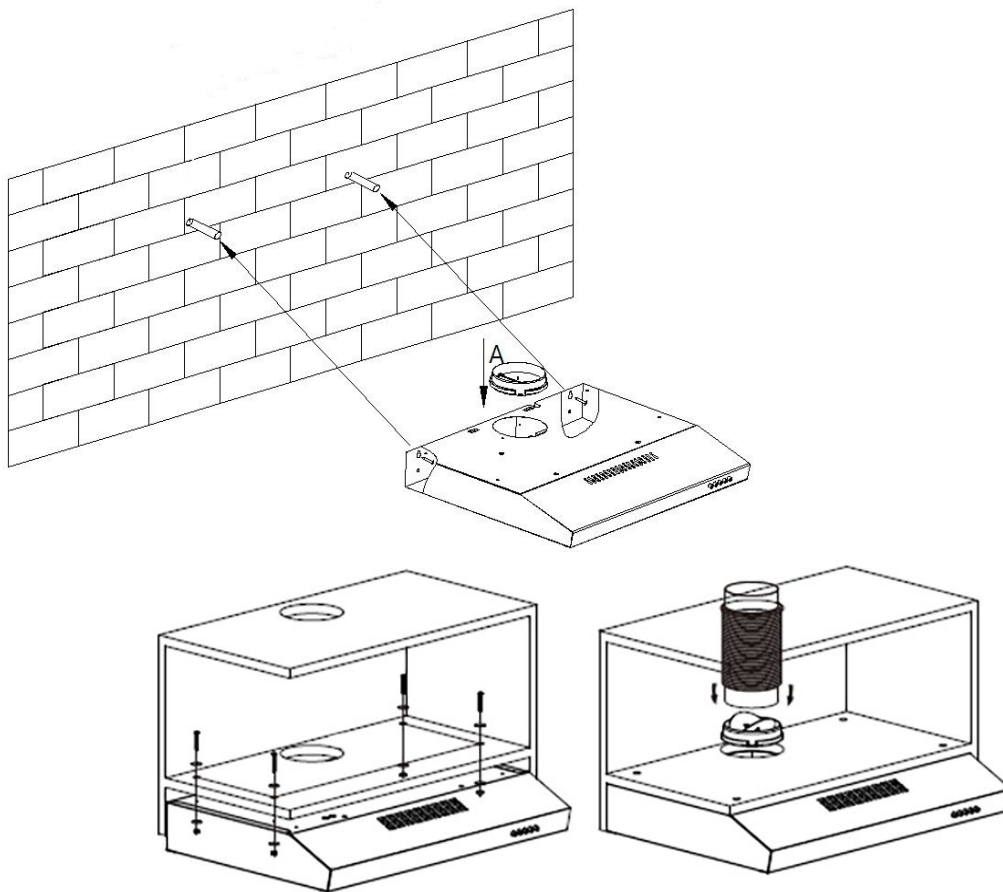



2. If planning on adding a 120mm ducting pipe, attach the non-return valve on top of the extractor as per the drawing above.

AIR VENTILATION SETTINGS

MODELS: AR-60-903BL, AR-60-903SS, AR-90-903BL, AR-90-903SS

If venting to the outside by means of a 120mm ducting pipe, firstly remove the stainless steel knockout on the top of the extractor with a flat screwdriver. Secondly, turn the adjuster switch to the outdoor position (This can be found on the motor of the extractor, once the aluminium filters are removed).

The air will then be vented to the top of the extractor where the ducting pipe is connected.

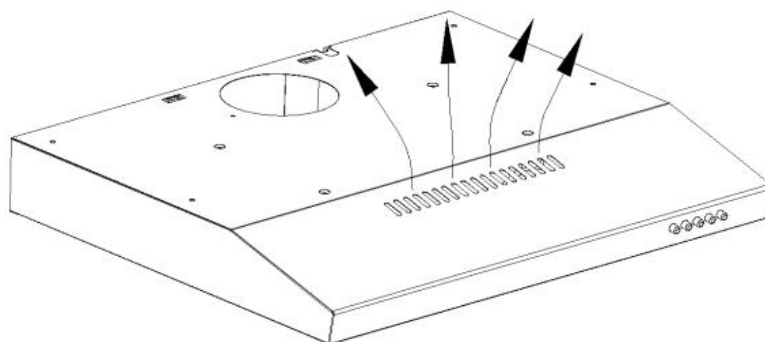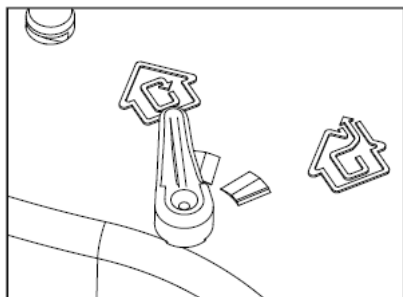


If **recirculating the air** back into the kitchen space by making use of the carbon cloth filter, turn the adjuster switch to the indoor position (This can be found on the motor of the extractor, once the aluminium filters are removed). The air will then be vented out the front of the extractor recirculating back into the kitchen space.

Please note that the carbon cloth filter is affixed to the back of the aluminium filters and need to be replaced every 3 – 6 months.

Warning: If using this extractor above a gas hob or cooker, please remove the cloth carbon filter and use just the aluminium filters.


MODELS: FAL-60-MH10BLL, FAL-60-MH10STL, FAL-90-MH10BLL & FAL-90-MH10STL

If **venting to the outside** by means of a 120mm ducting pipe, firstly remove the stainless steel knockout on the top of the extractor with a flat screwdriver. Secondly, locate the plastic air guide which comes in the plastic bag containing the manual and screws.

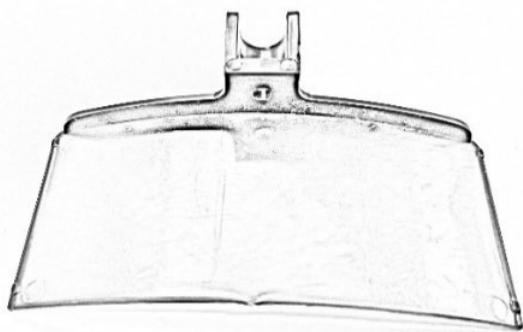


This guide must be inserted as per below and fixed in place with a screw to secure in place.

No Air Guide Fitted

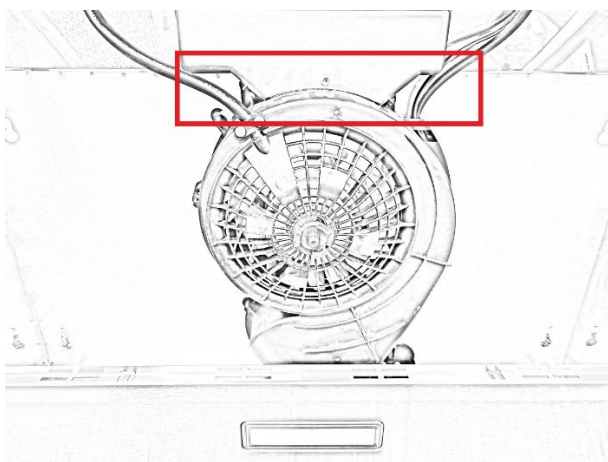

Air Guide Fitted

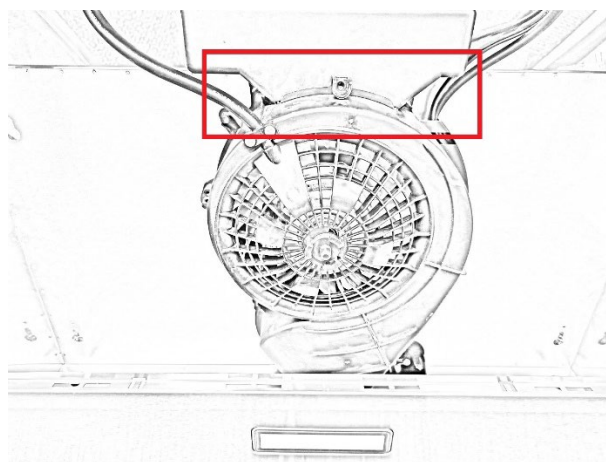

The air will then be vented to the top of the extractor where the ducting pipe is connected.

MODELS: FAL-60-CHBL, FAL-60-CHST, FAL-90-CHBL, FAL-90-CHST

If **venting to the outside**, there are two ventilation options available: **horizontal ventilation** and **vertical ventilation**.


Please ensure the correct method is selected and followed during installation.

Horizontal ventilation (see image A):


Seal the outlet on the top of the hood using the provided cover. Then, remove the metal knockout panel from the square outlet at the rear of the hood. This enables air to be vented through the back.

Vertical ventilation (see image B):



Begin by sealing the rear outlet using the provided cover. Remove the round metal knockout panel from the top of the extractor to allow air to be vented upwards. Fit the top outlet to the extractor, then cut a 130mm diameter hole into the base of the cupboard above. Install the extractor to the underside of the cupboard, aligning it with the hole. Attach the ducting pipe to the top outlet using a cable tie, ensuring it is securely fastened. Finally, extend the ducting pipe to an external outlet to complete the ventilation setup.

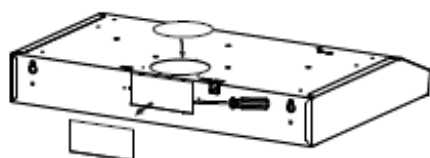

A


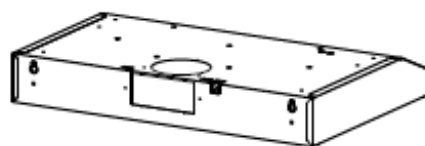


B

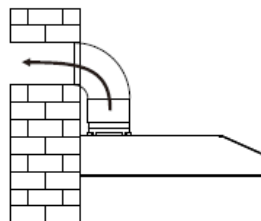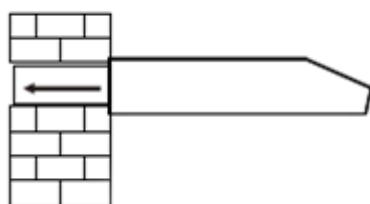

If **recirculating the air** back into the kitchen space by making use of the charcoal filters, turn the adjuster switches to the indoor position (This can be found on the motors of the extractor, once the aluminium filters are removed).

The air will then be vented out the front of the extractor recirculating back into the kitchen space.

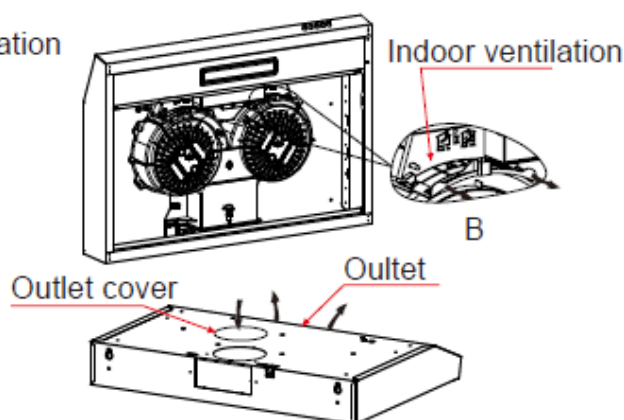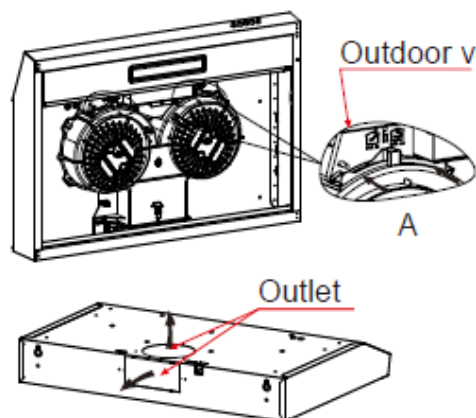

Please cover all outdoor outlets on top and at the back of the of the unit.

OPERATING INSTRUCTIONS

MODELS: AR-60-903BL, AR-60-903SS, AR-90-903BL, AR-90-903SS, FAL-60-MH10BLL, FAL-60-MH10STL, FAL-90-MH10BLL & FAL-90-MH10STL




LIGHTS

The light function can operate independently from the fan function. Pressing the light button will switch on the downlights. Pressing the light button a second time will turn them off.

FAN SPEED

To switch on the motor press one of the fan buttons once. The extractor has 3 fan speeds available for selection. To turn the extractor off press the power button once.

MODELS: FAL-60-CHBL, FAL-60CHST, FAL-90-CHBL FAL-90-CHST

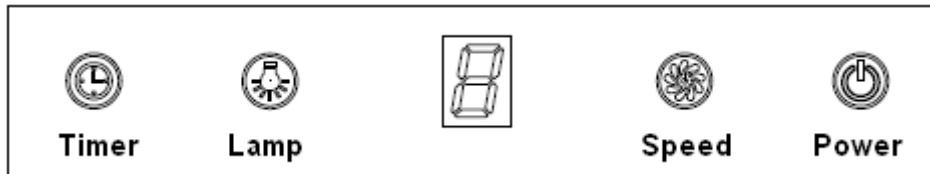

LIGHTS

Press the **Lamp** button to turn the light on. Press it again to turn the light off. *Please note: the lamp operates independently and is not controlled by the Power button.*

FAN SPEED

Press the **Power** button to switch the extractor on or off.

Press the **Speed** button repeatedly to cycle through the fan speeds: low → medium → high → low → medium... and so on. The LED display will show the corresponding speed level as 1 → 2 → 3 → 1 → 2..., indicating the current setting.

While the hood is operating, press the **Timer** button to activate the delay-off function. The hood will continue to run for a default duration of 9 minutes. The LED display will count down from 9 to 0 (9, 8, 7, 6 ...), decreasing by 1 each minute. Once the countdown ends, the hood and the lamp will switch off automatically. Pressing the **Timer** button again will cancel or re-activate the timer function.

GENERAL MAINTENANCE

- All external surfaces and controls can be cleaned using small amount of washing -up liquid applied with a soft cloth.
- Do not use abrasive cleaning agents that contain soda, acids, chlorides or solvents such as “Handy Andy”, as well as abrasive sponges as these will damage the surface material.

- Stainless Steel surfaces can be cleaned with special stainless steel cleaning agents.

FILTER MAINTENANCE

- Aluminium filters should be removed regularly and washed using soapy water or the dishwasher.
 - ❖ Some discolouration of the filter may occur if washed in the dishwasher.
- Carbon cloth filters are designed to remove additional grease from cooking vapours. Carbon cloth filters should be replaced every 3 – 6 months depending on grease saturation.
 - ❖ Fully saturated filters can become a barrier to free flow air movement restricting the performance of the extractor.
 - ❖ Grease laden filters can also be a fire hazard and should therefore be replaced regularly.

REPLACING DOWNLIGHTS

- Please contact Falco Service below for an LED light
- Unplug the cooker hood from the power source.
- Remove the aluminium filters and pop out the entire LED light fitting by pressing downwards with equal pressure.
- Once the LED light is loose, disconnect the electrical connector block.
- Replace with the new light and pop the LED light back into place.

PARTS AND SERVICE

- Falco extractors are covered by a 3 year “nationwide” guarantee within the borders of South Africa.
- Should a service call be required please contact us on:
 - Tel: 010 880 1858 / 011 454 4314
 - Cel: 082 769 2715
 - Website: www.falco.co.za
 - Email: service@falco.co.za

Warranty and service certificate:

This certificate is issued by Falco Domestic Appliances, supplier of Falco models. Hereinafter referred to as 'The Company', to the original purchaser only, of the product/appliances described on the certificate and shall constitute the only warranty given in respect of this product/appliance.

The Company warrants to the original purchaser that for the period of **THREE YEARS** on domestic products from date of purchase the appliance should be free from defect under normal domestic use, both in workmanship and material.

Important Notice:

Please **DO NOT** remove the warning label on the motor housing until the installation is finished. Debris dropped inside the motor housing during installation causes the motor fans to break when the unit is turned on resulting in a very loud and noisy extractor. All fans are tested on the assembly line before packaging.

Venting Outwards and Ducting: Please ensure your ducting hose (if venting outwards) does not exceed more than 2.5m. An additional in-line extraction motor must be fitted in-line with the ducting on all ducting exceeding 2.5m. To avoid a reduction in extraction rate, it is important to keep the length of your ducting under 2.5m. The longer the ducting, the less extraction power your extractor will have unless you fit an additional in-line motor to support in the extraction of the air. Failure to comply with the above shall void the purchaser's warranty until such time they correct the installation.

If not, the warranty is subject to the following conditions:

1. Repair or replacement of any part of this product/appliance, found by The Company to be defective, shall be at the cost of The Company. The Company reserves the right to affect such service through any Service Division authorised by The Company to carry out service on The Company's products/appliances. The cost of the service shall be borne by The Company in full, providing that the product/appliance is located no further than 50km from an authorised service agent.
Where the product/appliance is located beyond the 50km radius, the purchaser shall be liable for the standard travelling charges, as determined by The Company or alternatively, The Company reserves the right to ask the purchaser to deliver any faulty product/appliance to the dealer from which it was bought or nearest service agent, for repairs. After the said repair has been completed, the original purchaser is again responsible for the collection and transportation of said product/appliance.
2. Where the purchaser lives in an outlying area (farms/ remote locations) where appointed Service Agents are limited or non-existent, The Company reserves the right to request such a purchaser to transport the unit to and from the nearest appointed Service Agent for repairs.
3. The Company shall not be held responsible for transportation/other costs other than those incurred within the provisions of Clause 1 and 2 of this Certificate.
4. Abuse, misuse in conflict with the operating instructions or connection to incorrect voltages (generators, solar panels, wind turbines without the additional and compulsory addition of pure sine wave invertors), shall release The Company from all its obligations under warranty. It is an express condition of these warranties that the purchaser takes due care and attention in the installation, use and maintenance of the product/appliance.
5. Any physical damage to the product/appliance that occurred prior to delivery/receipt of the product/appliance will only be included in this warranty provided that it is reported, together with the proof of purchase within 48 hours thereof. Any part on any of the abovementioned products/appliances will be excluded from this warranty, should findings indicate that the parts are damaged or malfunctioning because of any form of physical damage.
6. This warranty shall become void and cease to be valid if the product/appliance is dismantled by, or any repairs to the product/appliance are affected by any person not authorised by The Company, or if replacement parts not approved by The Company are used in any product/appliance, or if the serial number of the product/appliance is removed.
7. These warranties shall not apply if the product/appliance is purchased or used beyond the borders of the Republic of South Africa (Swaziland, Lesotho, Namibia, Botswana and Zimbabwe).
8. The Company shall not be responsible for damages resulting from fire, floods, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible, nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunctioning of the appliance/product.
9. Where service is requested under warranty and no fault or any defect is found by the Company service agents, all costs incurred will be for the purchaser's account.
10. This certificate together with the purchaser's proof of purchase (Invoice from Dealer) will serve as proof of purchase. For warranty purposes, it will be essential to produce this Certificate with the Invoice. Failure to do so will render the purchaser liable for service costs.
11. The Company will not exchange any faulty product/appliance still under warranty EXCEPT if the appointed service agent inspects and confirms with valid proof that the appliance is irreparable.
12. This warranty shall become void and cease to be valid if the product is installed at the incorrect height. Please refer to your manual.
13. This warranty shall become void and cease to be valid if the incorrect size Extractor Fan is installed above any electrical or gas hob. Example of such an installation is installing a 600mm Extractor above a 900mm gas or electrical hob.
14. This warranty does not cover rodent or insect infestation.
15. Repairs and parts covered by the Company includes: the motor, the PCB, the power and light switch, the capacitor, the motor fan blade and transformer.
16. This warranty shall become void and cease to be valid if the extractor fan is used for commercial purposes or on the incorrect application. This may be subjected but not limited to; outdoors use, use in commercial kitchens, use on motorboats, use above any braai facilities, boarding school kitchens, restaurant kitchens, coffee shops, tuck shops, commercial cookers and chips fryers. Installing and operating your domestic extractor fan above the wrong application poses a serious fire hazard.

Appointed call centre:

FALCO DOMESTIC APPLIANCES (PTY) LTD

Service call centre: Tel: (010) 880-1858; Whatsapp: 082-769-2715

E-mail: service@falco.co.za

Alternatively book a service call online using the following link: www.falco.co.za/service.

Any service-related queries should be directed directly to the dealer (store) where the unit was purchased. Alternatively, the purchaser can contact the appointed call centre on the details provided above. The appointed call centre, Falco Domestic Appliances (PTY) Ltd, will allocate the service call under the warranty procedure to one of their closest service agents in the purchaser's area. No service call will be considered under the warranties if no proof of purchase can be presented.

Compliments or Complaints regarding service can be directed to Info@falco.co.za